



StellarKote BROCHURE

Goes Beyond Paint


Kote[®]
Working for our customers success!

StellarKote

GOES WHERE NO PAINT HAS GONE BEFORE

StellarKote is the latest and greatest innovation that Kote Products (Pty) Ltd has ever produced. Bringing all our years of extensive research, trial and error tests and countless customer feedbacks we now have the [ULTIMATE SUPER PAINT!](#)

StellarKote is an indoor and outdoor coating that is not like any other 'paint' you'll find on the market today, worldwide. It is not just another liquid to make your home look pretty, no StellarKote is a protective coating that is a paint and waterproofing product as well as a self primer all rolled into one. No longer do you have to use three separate products to achieve one goal, protecting your property!

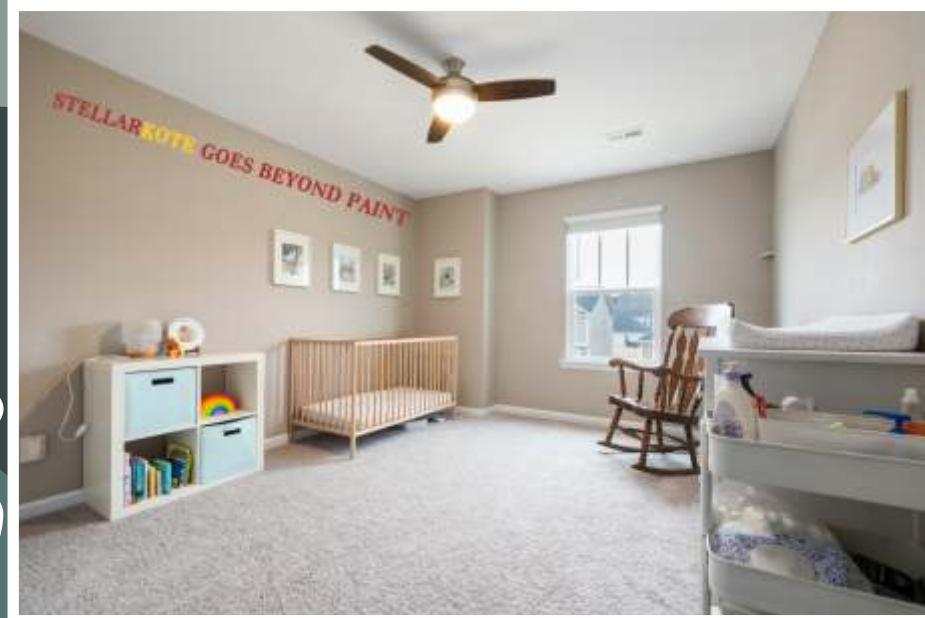



StellarKote

BELONGS AMONGST THE STARS


This is not some idle brag, we at Kote Products have always looked to providing the common man with access to the very best that can be offered regardless of what the costs may be.

StellarKote is that very product. Much like everything else we manufacture, StellarKote is made to last. It is made to withstand the intense South African sun and rain, made to protect every single home owner with damp and waterproofing properties so they know their home is the safest place to be.

That is our passion, provide the best, FOR the best.

StellarKote

THE BREAKDOWN OF STELLARKOTE AND ITS PROTOCOLS

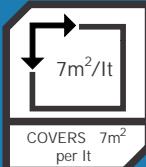

SPREADRATE/COVERAGE

StellarKote covers about 7 square meters per liter per coat

*This depends on the absorbency of the surface

*You need to apply a minimum of 3 coats for exceptional longevity.



SELF CLEANING

This clear product is scrubbable and 100% self cleaning making it easy to maintain both indoor and outdoors.

This means it will not absorb dirt but repel it.



PROTOCOL

The StellarKote product will only be effective if you apply no less than 3 coats. You can apply each coat 1 hour apart in good warm weather (Remember this is a protective coating not a cheap paint)



THE TOOLS

StellarKote is a water based product, meaning the only liquid you need to clean your paintbrush, roller or spray machine is water




PROPERTIES OF STELLARKOTE

StellarKote is an eco-friendly, UV Stable, VOC free, hydrophobic, flexible, resistance to heat, has incredible adhesion and scrubbable properties. It is also reinforced with pure indestructible ceramic.



CURING AND DRYING TIMES

StellarKote requires warmer sunny weather in order to dry and cure. Drying time between coats is 30 mins to 1 hr in warm weather. As with all coatings full cure in 7 days.

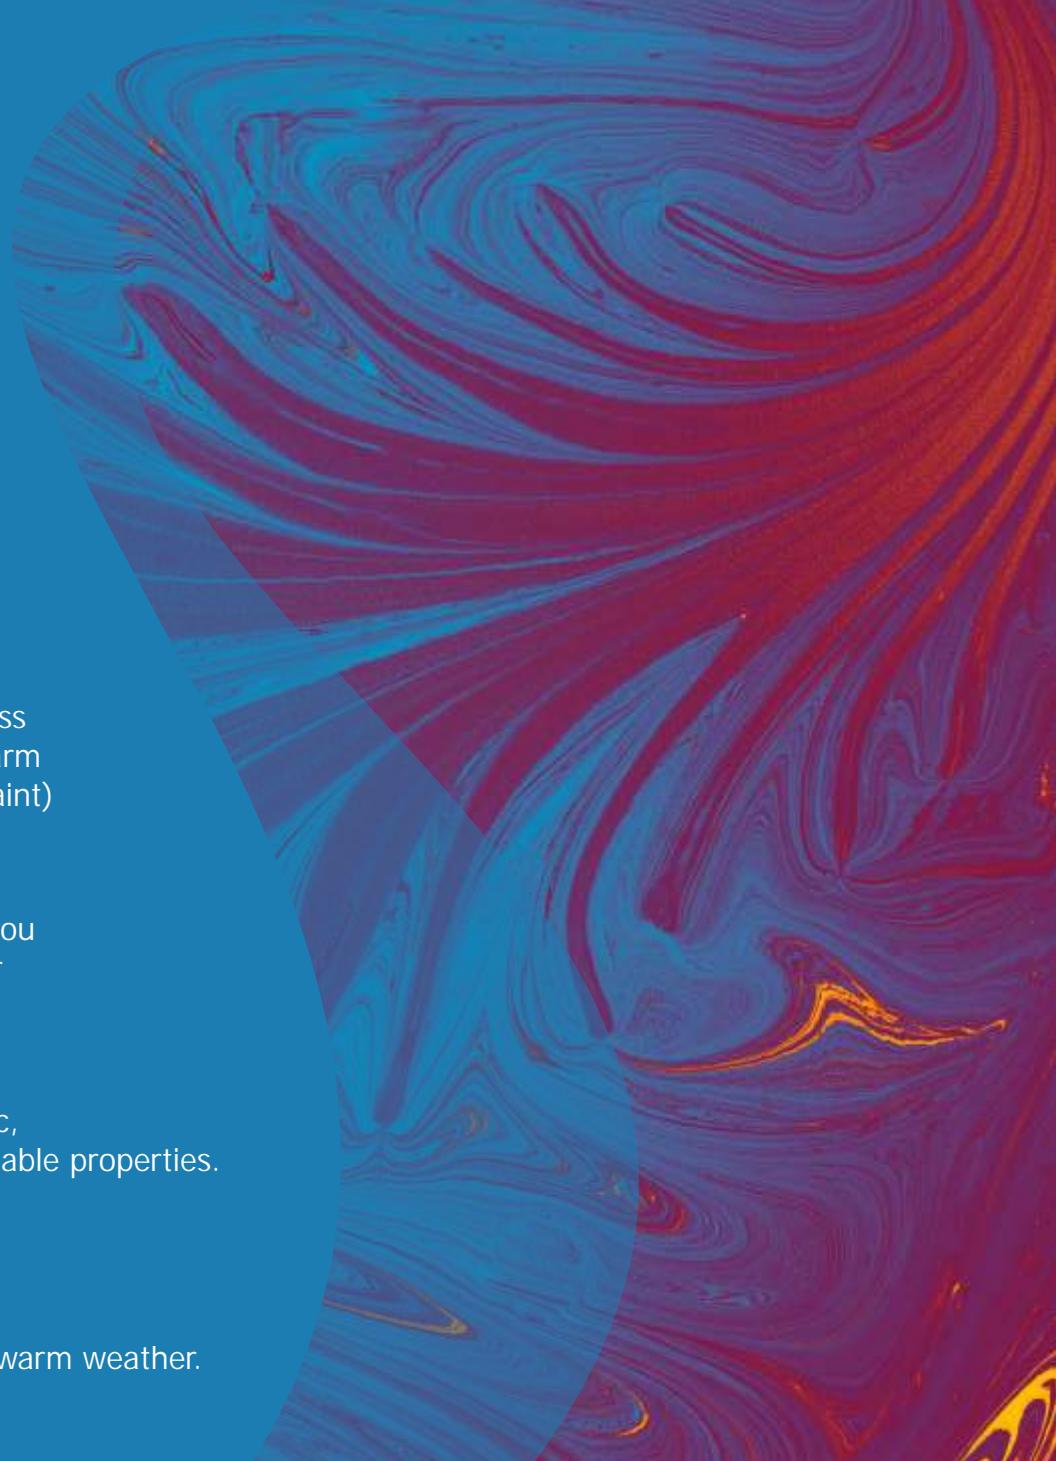



SMOOTH VS TEXTURED GLOSS VS SATIN VS MATT

When it comes to a desired end finish we have created quite a few versions of our product to satisfy a wide variety for our customers and applications.



SMOOTH VS TEXTURED

Most walls require a silky smooth finish, and we have that, but sometimes you want something a bit more textured. Which is what we also manufacture! Nothing is impossible!


GLOSS VS SATIN VS MATT

If a space is needing a softer effect we can make our StellaKote a Satin finish, but maybe you'd prefer a Matt finish? We have that covered too!



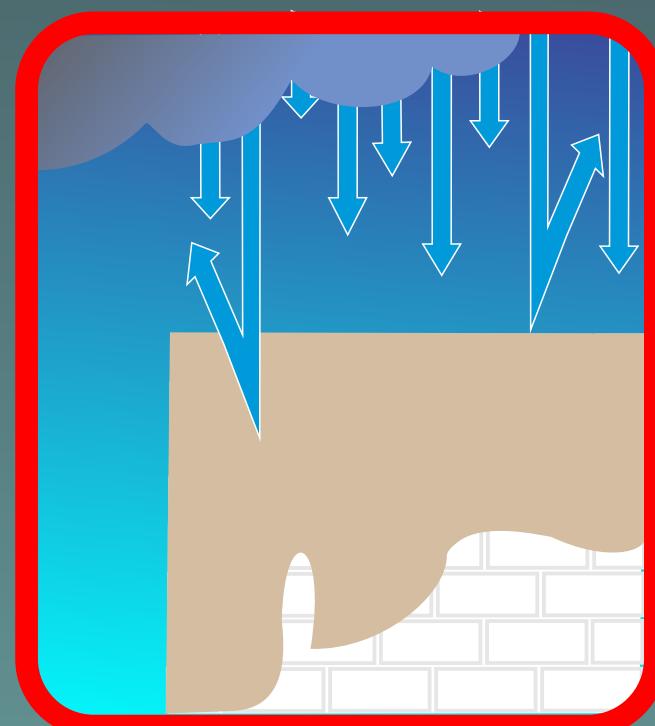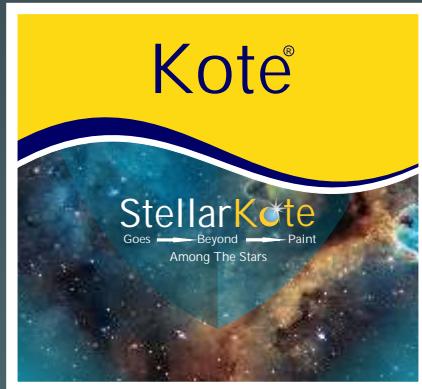

Protects your home
from rain

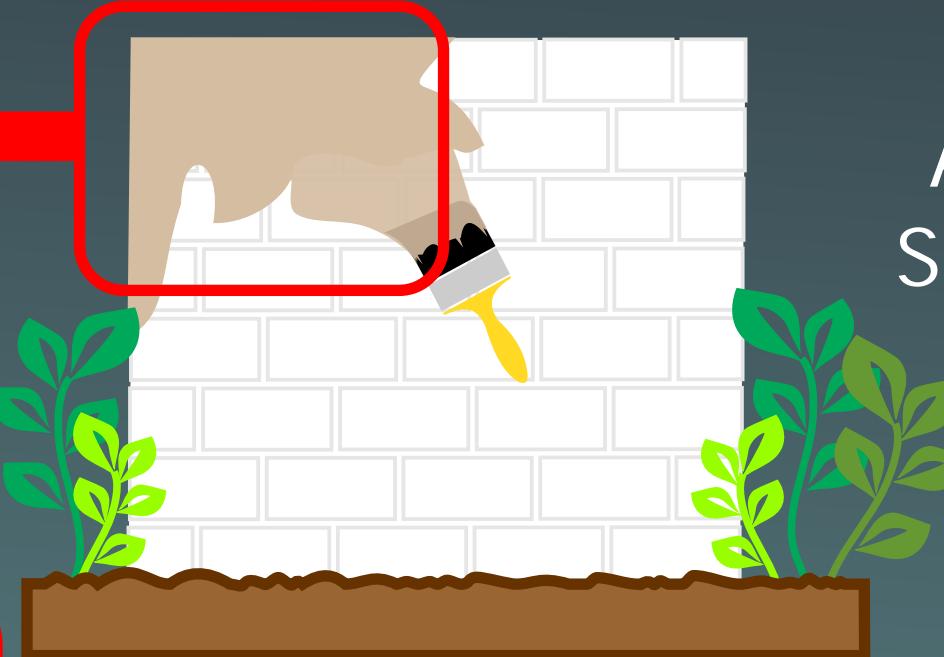

Protects your home
from harmful UV rays



AN ALL-IN-ONE SUPER PAINT

WHAT StellarKote DOES

StellarKote is not like any other paint you'll find on the shelf at your local hardware store.

StellarKote has been designed to not just provide an aesthetically pleasing looking wall but a highly effective protective coating.

It properly seals your walls and various surfaces from the harsh UV rays and rain, the elements, which ultimately protects your home from degradation.

Think of StellarKote as the answer to all your painting prayers!

StellarKote

SURFACE PREPARATION AND INSTRUCTIONS

The correct preparation of the substrate is vital to the success of StellarKote and its efficacy. If you do not follow these steps you are gambling with your money and time. You are also bound to have a failure in the application of the product or other consequences because of negligence.

You are strongly advised to follow the law and its guidelines as to cleaning procedures!

1. Make sure your surface is well inspected and repair any cracks or hollow areas where water may stand for long periods. You can do this by using our CrackKote to fill in the cracks.

If there are damp issues then it is essential to use our DampKote to rid any potential substrate issues in the future.

Leave this to dry well for a couple of hours or so, depending on the weather.

2. If there is loose material or sandy moss remove them and brush away.

DO NOT SANDPAPER YOUR WALLS! Rather use a wire brush to pull the paint off.

3. Before you begin the first steps of application as described on the next page, make sure that you have checked the weather forecast to ensure you don't have any surprise rainstorms within the curing period. Also you need to make sure your surface is not overly hot, which means you will begin coating in the early morning before the sun heats the surface too much for proper penetration to occur. The aim is for penetration and not a race to quick drying!

If the surface is too hot, StellarKote will dry too early and you will experience bonding issues later, so please follow the preparation guidelines religiously.

4. StellarKote can be quite forgiving and easy to use if you work within the parameters that we set, this is how you obtain complete success in the application of any product.



INSTRUCTIONS

StellarKote must be applied as follows: (depending on the substrate)

*Make sure you follow the Surface Preparations instructions before applying StellarKote

1. Make sure that the surface has been prepared properly. If the substrate is suspect then ANY product will not function to it's full potential.
2. Take a paintbrush or airless spray gun and apply a generous first coat to ensure it coats the surface evenly. Wait an hour then come back and repeat the step until you have applied all 3 coats.
*You can use a paintbrush or an airless spray gun to apply the product to the surface.
The paintbrush is great for smaller areas whilst the airless spray gun is helpful for the larger areas that need to be coated.
3. Be sure to do this work in good weather and at least three days prior to any expected rain. Although StellarKote dries in a few hours in warm weather, it will take 7 days to cure fully.
So the longer you can have no rain to disrupt the curing process the better.
5. Whilst we suggest applying three coats we do acknowledge that some areas need more coats than others so be sure to do a test patch before full application.
6. Like all our products, StellarKote is not just a 'paint' it is a protective coating and needs to be applied with this in mind. Make sure the surface isn't too hot as this will cause the adhesion to be affected.



What could go wrong?

ITS IMPORTANT TO BE INFORMED



StellarKote can be abused in the following ways which could prove to be costly to you.

1. Application: If the surface is too hot then StellarKote cannot get a grip on the surface and you will have peeling.
2. The product itself: If you do not allow for each coat to dry thoroughly before the next application you will get drag marks if using a paintbrush. Also keep in mind that if it rains soon after being applied then the product is being diluted and it will not perform as promised. Therefore it is imperative to apply in good weather and a few days prior to rain.
3. Your expectations are not met: Decide what it is you are wanting from the protective coating! This is probably the most important, do not expect to get the same amount of protection with 2 coats of product as you will with 4 coats. The more you apply the more protection you will get.
4. Drying time: It will take longer to dry in cold or damp weather. Also be aware of falling dew at night, so stop applying the product early in the day so as to avoid dilution of your coating. It is strongly advised to apply three or four generous coats rather than one or two heavy and thick coats. This is an atmospheric drying or evaporating drying water-based coating so please use common sense when gauging the weather conditions.
5. Damaged surfaces: It is important to make sure any surface you want to encapsulate is diagnosed properly, cracks are mended, nails are waterproofed and sheets are not so degraded that they actually need to be replaced because they are not safe to work on. You don't want to have a lawsuit if a worker falls through an unsafe roof.



StellarKote are products manufactured by Kote Products (Pty) Ltd

Find more information about StellarKote and other Kote Products on our website
or feel free to get in touch via email or simply call

www.kote.co.za - 0312616866

Technical Advice: dave@kote.co.za

Admin: kels@kote.co.za



Working for our customers success!